


## OIL FILTER CUTTER INSPECTION TOOL

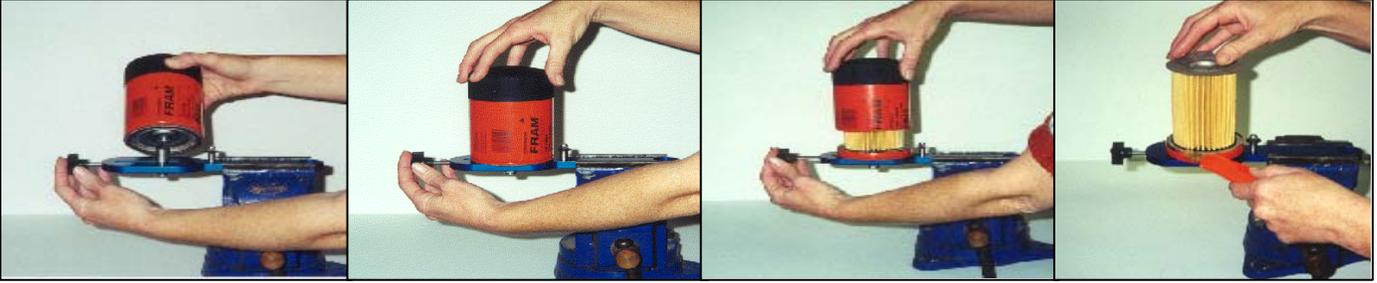

1. Place Oil Filter Cutter (OFC) in vise.  
2. Use correct stud/standoff for male or female filter.

3. After Oil Filter is drained place on stud.  
4. Rotate screw to move filter close to cutter.

5. Rotate filter while turning cutter screw, approx. 1-4 turn every revolution of filter, approx. 4 times.

6. TO VIEW: slice paper at base and top of filter to lay out filter element.



7. Filter element can be inspected by eye or using a magnifying glass.

8. To change studs for Aviation or Auto filter, place in vise to disassemble stud and standoff or cutter wheel.

9. Cutting filter by hand.